

## Activating/ deactivating timers

\* **1** **3** Timer group

0 = Timer off  
 1 = Timer on  
 2 = Function off  
 3 = Function and timer on

**Notes:** On telephones, particularly telephones that use the pulse dialling method that do not have a \* key or which do not support these functions, you can press the digits **9|9** instead of the \* key after activating this feature in TK-Suite Set.

# AS 40P, 4000, 100IT

## Short-form operating instructions for analog and ISDN terminals

### External call

Dial "0" to seize external line **0** Spontaneous seizure with internal

### External Acces with specific MSN

\* **0** **0** enter specific MSN **#**

### Reserving an outside Line

**0** **R** \* **2** **9**

### Internal Call

Dial "0" to seize external line Spontaneous seizure with internal **#**

### Internal forwarding without announcement

**R**

### External forwarding

**R** **0** **R** \* **2** **0**

### Answer a waiting call / Reject a waiting call

**R** \* **8** **R** \* **2** **1**

### Picking up calls

External call \* **8** Selective Call Pick Up \* **2** **6** extension number

### Do not disturb

\* **4** **3**

- 1 = 1<sup>st</sup> internal number
- 2 = 2<sup>nd</sup> internal number
- 0 = both internal numbers

- 1 = internal calls
- 2 = external calls
- 3 = all calls
- 0 = off

### Call variant 2 (night service)

\* **5** **3**

- 1 = on
- 0 = off
- 2 = all off
- 3 = all on

 Enter phone number to switch individually **#**

Ident no. 1523704

Subject to change without notice. No liability can be accepted for errors contained in this document.

Printed in Germany

0055

AGFEO GmbH & Co. KG  
Gaswerkstr. 8  
D-33647 Bielefeld  
www.agfeo.com

### Callvariant 3 (internal call forwarding)

\* 5 4 1 = on  
 0 = off  
 2 = all off  
 3 = all on

Enter phone number to switch individually

### Automatic dialling

\* 5 0 1 = on  
 0 = off

### Busy on Busy

\* 4 6 1 = on  
 0 = off External Phone Number

### Conference (internal/external)

R R \* 6 1 \*

### ISDN conference

R \* 6 0 R \* 6 1 \*

### Announcement to system telephones

\* 4 8 Extension of Systel or  
 0 = all SysTels

### Placing a call on hold (point-to-multipoint connection only)

R \* 6 0 R \* 6 0

### Least Cost Routing (LCR) on/off

\* 4 2 1 = on  
 0 = off

### Parking a call

R \* 2 2 Retrieving Call \* 2 2

R \* 2 7 \* 2 8

### Inquiry/ Brokers Call

R R Enter „0“ to switch to the external call or  
 the internal phone number to switch to  
 the internal call

### Call back when free

R \* 1 9

### Dialing a phonebook number

\* 3 0 0 0 to 9 9 9

### Telephone lock

\* 5 6 1 = lock  
 0 = unlock Telephone PIN

### Door call variant 2 (night service)

\* 5 3 4 = off  
 5 = on Extension number of doorphone

### Calling a doorphone / picking up a door call

\* 1 1 Extension number of doorphone

### Actuating the door opener

Door Call R \* 1 1 Extension number of doorphone

Direct \* 1 2 Extension number of doorphone

### Activating diversion from (follow me)

\* 5 7 1 Enter the number of the phone  
 from where you wish to divert calls

### Deactivating diversion from (follow me)

\* 5 7 0 Enter the number of the  
 phone from where you wish  
 to divert calls

### Activating diversion to (diversion by the telephone System)

\* 5 8 1 = external destination  
 2 = internal destination  
 3 = abbreviated dialling destination

0 = inactive  
 1 = permanent  
 2 = on busy  
 3 = if no answer

Enter the internal phone number that has to be diverted Enter the phone number or abbreviated dialling destination

### Deactivating diversion to (diversion by the telephone System)

\* 5 8 0 Enter the internal phone whose diversion  
 is to be deactivated

### Diversion to - call forwarding (diversion by the ISDN exchange)

\* 6 3 1 = external phone number  
 3 = phonebook number 0 = inactive  
 1 = permanent  
 2 = on busy  
 3 = if no answer Enter the system or multiple subscriber number

Destination: Enter the external phone number or phonebook number

### Deactivate diversion to - call forwarding (diversion by the ISDN exchange)

\* 6 3 0 Enter the system or multiple subscriber number

### Deactivate and delete diversion to

\* 6 3 9 Enter the system or multiple subscriber number