

Installation of the module

Safety notes




Before unlocking the cover, remove the 230 V mains plug from the telephone system.

Opening the housing

Unlocking the cover

- Pull out the black bolt slightly to the side using a narrow screwdriver blade (about 2 mm wide) until you can grip the bolt (Fig. 1 and 2).
- Hold the bolt and pull it right out turning it slightly (Fig. 2 and 3). You can use the bolt as a module extractor when exchanging a module.

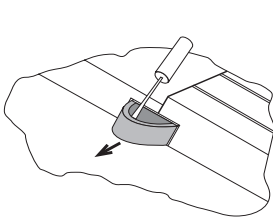

Unlocking the cover Fig. 1

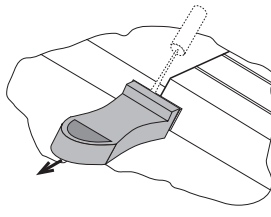


Fig. 2

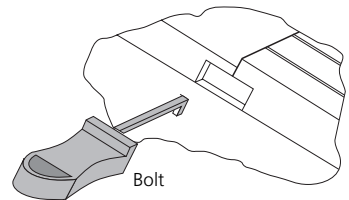


Fig. 3

Removing the cover

- Grip the underside behind the finned cover that covers the telephone system's connection panel.
- Pull the edge of the cover down slightly to unlatch it. Detach the cover towards you.

Removing the module from the packaging - Safety measure

Before removing the module from the packaging and before inserting the module in the AS 40, touch the metal shield of the PC/printer socket on the bottom of the AS 40 briefly with your

finger. This discharges any possible electrostatic charge and protects electrostatically sensitive components of the AS 40 and the module.


Installation of the module

- Insert the module vertically with the large connector strip at the top in the top and bottom guide rails of a slot. You can select freely between slots 1 to 4.
- Push the module carefully back until the connectors grip and the lug of the module snaps into the lock.
- Stick the enclosed label showing the module connections above the module slot on the housing.
- Please see the operating instructions - chapter 'Installation' of the telephone system AS 40 for information about connecting the module.

Closing the housing

Replacing the cover

- First hook in the cover at the top of the housing. The three latches engage behind the edge of the housing.
- Press onto the cover until it latches into the housing at the bottom.

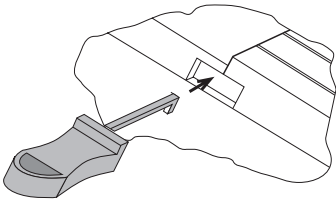

Locking the cover

Figure 4

Locking the cover

- Insert the bolt with the hook facing downwards in the cover opening, turning the bolt slightly (Fig.4).
- Push the bolt in past the pressure point up to the stop (fig. 5)

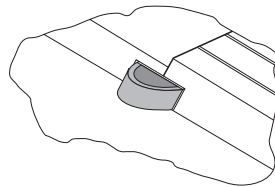


Figure 5



The housing must be locked before plugging in the telephone system's 230 V- mains plug.

Startup

- Switch on the telephone system by plugging in the 230 V- mains plug.